




## Roof Opening Panel Glass (76.84.03)

### Removal

- 1 . Open the roof opening panel blind.
- 2 . Open the roof opening panel to the tilt position.
- 3 . Remove the roof opening panel glass.
  - Remove the 3 Torx screws.
  - Repeat the above procedure for the other side.

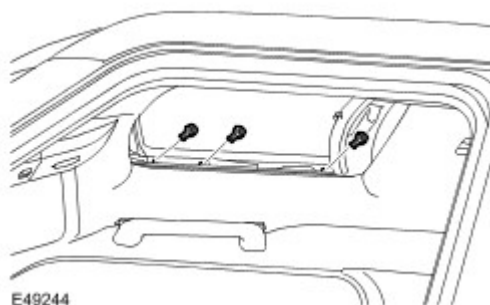

### Installation

- 1 . Install the roof opening panel glass.
  - Install the Torx bolts, but do not tighten fully at this stage.
- 2 . Align the roof opening panel glass. For additional information, refer to [Roof Opening Panel Alignment \(76.84.82\)](#) (Section 501-17)